

## FTI-1000 QVI Connections

1	14	QVI ch3 S
2	15	QVI ch2 S
3	16	QVI ch1 S
4	17	QVI ch0 S
5	18	QVI ch3 F
6	19	QVI ch2 F
7	20	QVI ch1 F
8	21	QVI ch0 F
9	22	DGND
10	23	AGND
11	24	RLY GND
12	25	+15V
13		+12V
		+5V
		-15V
		+3.3V
		REG 25_0
		REG 25_1
		REG 25_2
		REG 25_3
		REG 25_4
		REG 25_5
		REG 25_6
		REG 25_7
		DGND